


TRENCH SHIELD TABULATED DATA

Model Number: 01-TS-6H1028SKE-USS

5385 Bay Oaks Dr.
Pasadena TX 77505

Serial Number	PS26241	Spreader Size	8" SCH 80 Pipe	Pressure Rating	828 PSF
Trench Shield Height	10 FT	Spreader Yield Strength*	65 KSI	Vert Pipe Clearance	84 IN
Trench Shield Length	28 FT	Max Spreader Length	20 FT	Horiz Pipe Clearance	312 IN
Wall Thickness	6 IN	Spreader Pin Diameter	2 IN	Surcharge Pressure ¹⁶	0 PSF
Weight	17,275 LBS	Pin Yield Strength	90 KSI	33% Shoring Factor	YES

SOIL TYPE	MAX DEPTH (FT)**	Hs (FT)	MAX SLOPE
A-25	38	10.5	3/4:1
B-45	23	8.5	1:1
C-60	19	6.5	1 1/2:1
C-80	15	0	Flat

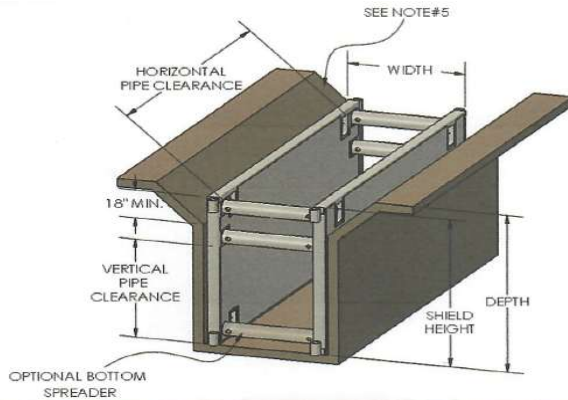

01/26/2026

NOTES & LIMITATIONS:

- 1) The exterior wall of the trench shield shall be in direct contact with soils.
- 2) Excavation 2' below bottom of shield is only permitted when there is no indication of possible loss of soil from behind or below the bottom of the shield.
- 3) Sloped soils must extend to no less than 18" below the top of the shield, as shown in diagram above. Shield need not extend above soil when soils are flat and level with top of shield.
- 4) Except as approved in table above (Hs), any excavations over 20'-deep with sloping require site specific approval by a Licensed Professional Engineer (P.E.).
- 5) User is responsible for safe support of shield to ensure it cannot shift vertically or horizontally at any time.
- 6) Shield may be stacked, provided that appropriate connections are made between the stacked shields to prevent lateral
- 7) Shield must be used in strict compliance with all applicable OSHA guidelines and limitations outlined in this document.
- 8) This document has been prepared by a P.E., as required by OSHA 29 CRF, Part 1926, Subpart P.
- 9) Shield shall be used under the supervision and direction of a Competent Person as defined by CRF, Part 1926, Subpart P. Among other qualifications, the Competent Person shall be trained in the use of trench shields and have practical field experience
- 10) All spreaders shall be secured to sockets with pins or other mechanical connections approved by the manufacturer, prior to shield use. Do not apply side load or vertical load to the spreaders at any time (such as leaning plates/sheeting for soil support), unless approved in writing by a P.E. or the Manufacturer.
- 11) Shield shall be installed in a manner to restrict lateral or other hazardous movement of the shield in the event of the application of sudden lateral loads.
- 12) Shield shall be inspected prior to each use, to ensure they are in good condition and free of any damage or visual defects.
- 13) Any repairs or modifications to the shield, such as extending height or length with plates, are strictly prohibited, unless approved in writing by a P.E.
- 14) Pressure rating is a triangular pressure distribution based on C60 soil at bottom of the excavation.
- 15) User must ensure that the groundwater level on all sides of the shoring is maintained below the base of the excavation at all times, otherwise, this certification is invalid.
- 16) All equipment and materials shall be kept a sufficient distance clear of the shoring, as directed by a licensed Professional Engineer, to ensure this surcharge limit is not exceeded.

*Pressure Ratings are limited by the smallest Pacific Shoring Company shield capacity and Owner spreader compression and bearing capacity. Where spreader or bearing governs, the Owner must provide certified material properties, calculations, and/or load testing for Engineer approval. To achieve listed Pressure Rating use minimum $F_y=65$ KSI (API 5L X65 or equivalent).

**Depth rating controlled by spreader compression and/or bearing capacity.

WARNING: USE OF SHIELDING OTHER THAN OUTLINED IN THIS DOCUMENT CAN CAUSE FAILURE, COLLAPSE, OR CAVE-INS, AND MAY RESULT IN SERIOUS INJURY OR DEATH.