


TRENCH SHIELD TABULATED DATA

Model Number: 03-MH-81010FB-PSP

3810 Magnolia Pkwy
Pearland TX 77584

Serial Number	PS26691	Spreader Size	5" SCH 80 Pipe	Pressure Rating	2536 PSF
Manhole Height	8 FT	Spreader Yield Strength	35 KSI	Weight	5,128 LBS
Manhole Length	10 FT	Max Spreader Length	6 FT	Vert. Pipe Clearance	45 IN
Manhole Width	10 FT	Spreader Pin Diameter	1 3/8 IN	Horiz. Pipe Clearance	120 IN
Wall Thickness	4 IN	Pin Yield Strength	90 KSI	Surcharge Pressure	72 PSF
Cutout Width	N/A	Cutout Height	N/A	33% Shoring Factor	YES

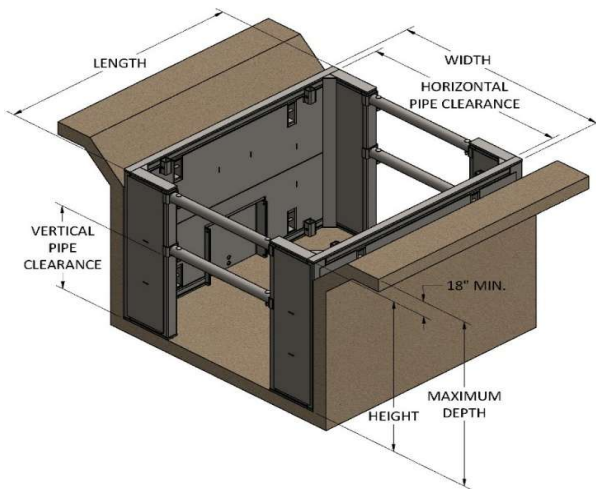

SOIL TYPE	MAX DEPTH (FT)
A-25	40
B-45	40
C-60	40
C-80	35



NOTES & LIMITATIONS:

- 1) The exterior wall of the trench shield shall be in direct contact with soils.
- 2) Excavation 2' below bottom of shield is only permitted when there is no indication of possible loss of soil from behind or
- 3) Sloped soils must extend to no less than 18" below the top of the shield. Shield need not extend above soil when soils are flat and level with top of shield.
- 4) Except as approved in table above (Hs), any excavations over 20'-deep with sloping require site specific approval by a Licensed Professional Engineer (P.E.).
- 5) User is responsible for safe support of shield to ensure it cannot shift vertically or horizontally at any time.
- 6) Shield may be stacked, provided that appropriate connections are made between the stacked shields to prevent lateral movement.
- 7) Shield must be used in strict compliance with all applicable OSHA guidelines and limitations outlined in this document.
- 8) This document has been prepared by a P.E., as required by OSHA 29 CFR, Part 1926, Subpart P.
- 9) Shield shall be used under the supervision and direction of a Competent Person as defined by CRF, Part 1926, Subpart P. Among other qualifications, the Competent Person shall be trained in the use of trench shields and have practical field experience with the use of shields, soil classification (A, B, or C as defined by OSHA regulations), and recognizing hazardous conditions.
- 10) All spreaders shall be secured to sockets with pins or other mechanical connections approved by the manufacturer, prior to shield use. Do not apply side load or vertical load to the spreaders at any time (such as leaning plates/sheeting for soil support), unless approved in writing by a P.E. or the Manufacturer.
- 11) Shield shall be installed in a manner to restrict lateral or other hazardous movement of the shield in the event of the application of sudden lateral loads.
- 12) Shield shall be inspected prior to each use, to ensure they are in good condition and free of any damage or visual
- 13) Any repairs or modifications to the shield, such as extending height or length with plates, are strictly prohibited, unless approved in writing by a P.E.
- 14) Pressure rating is a triangular pressure distribution based on C-60 soil at bottom of the excavation.
- 15) User must ensure that the groundwater level on all sides of the shoring is maintained below the base of the excavation at all times, otherwise, this certification is invalid.
- 16) All equipment and materials shall be kept a sufficient distance clear of the shoring, as directed by a licensed Professional Engineer, to ensure this surcharge limit is not exceeded.

WARNING: USE OF SHIELDING OTHER THAN OUTLINED IN THIS DOCUMENT CAN CAUSE FAILURE, COLLAPSE, OR CAVE-INS, AND MAY RESULT IN SERIOUS INJURY OR DEATH.