


TRENCH SHIELD TABULATED DATA

5385 Bay Oaks Dr. Pasadena TX 77505

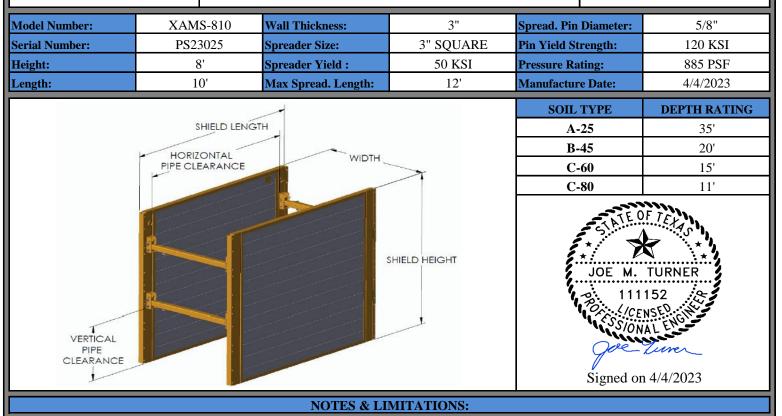

- 1) This document has been prepared by a Registered Professional Engineer (P.E.), as required by OSHA standard 29 CRF, Part 1926, Subpart P.
- 2) Shields shall be used under the supervision and direction of a Competent Person, who is educated and trained in the use of shoring shields, and has experience in the field with shield use, OSHA soil type classification, and recognizing hazardous conditions.
- 3) Shields must be used in strict compliance with all applicable OSHA guidelines, and limitations outlined in this document. Failure to do so can result in serious injury or death.
- 4) Shields shall be inspected prior to each use, to ensure they are in good condition and free of any damage or visual defects.
- 5) Soils shall be sloped in accordance with OSHA Subpart P. and must extend to no less than 18'' below the top of the shoring shield. Shield needs to extend above soil when adjacent soils are flat and level with top of shield.
- 6) Soil shall be classified by a Competent Person as type A, B, C, as defined by OSHA regulations.
- 7) Shields may be stacked, if appropriate connections are made between the stacked shields to prevent lateral movement.
- 8) Prior to shield use all spreaders shall be secured to sockets with pins, or other mechanical connections, that are approved by the manufacturer. Do not apply side load to the spreaders at any time (such as leaning plates for soil support), unless approved in writing by P.E.
- 9) Shield shall be installed in a manner to restrict lateral or other hazardous movement of the shield in the event of the application of sudden lateral loads.
- 10) Competent person must ensure surcharge limits and equipment setbacks are maintained at all times, unless approved in writing by a P.E.
- 11) The usage of the XAMS shield in conjunction with Modular Aluminum Panel Systems in three and four-sided applications shall be governed by the lower panel capacity of the two systems. The allowable aluminum "Panel Capacity" can be referenced in the Pacific Shoring Products "Yellow MAPS" tabulated data.
- 12) If different length panels are used in any combination, always default to the lower of the two depth ratings. Unless otherwise stated by a registered engineer in writing.